

MULTIFIT INLET FITTINGS

PRODUCT INFO




Jobe Multifit Inlet

Description

For use by Concrete Trough Manufacturers. The outer sleeve is cast into the trough wall when the trough is made. 20mm ($\frac{3}{4}$ " bsp) & 25mm (1" bsp) inserts are available to fit into the sleeve.




CODE	DESCRIPTION
MIF5520 MIF5525	Multifit Inlet Fitting (55mm Fitting Width) 20mm Thread 25mm Thread
MIF4720 MIF4725	Multifit Inlet Fitting (47mm Fitting Width) 20mm Thread 25mm Thread
PARTS	
MIP12 MIP14 MIP11	O'Ring Screws Square Drive Bit (Fits Battery Drill)
MIP10	Holding Tool

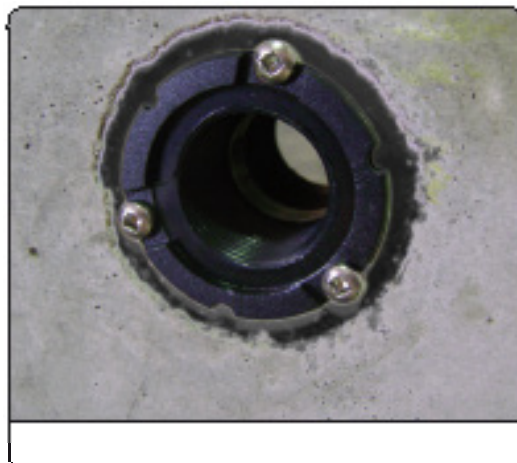

Installation

1. Outer is cast into concrete trough when manufactured.

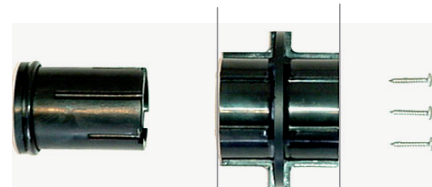

2. Select either a 20 or 25mm insert fitting and slide into the outer flange from the inside of the trough.

3. Screw the 3 locking screws provided in from the outside of the trough.